


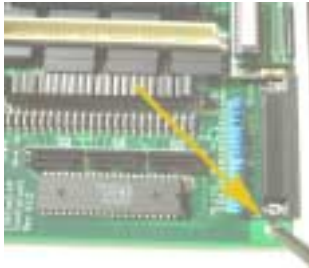

## Installation Instructions for DatamanUXP-Upg Upgrade Kit

1. Turn off the programmer and unplug it from its power source.
2. Remove the ZIF Socket\*.
3. Open the top part of the case on the existing programmer and also remove the upper PCB (retain).
4. Carefully remove the AC power connector between the switch and power supply.
5. Remove the power supply from the programmer. The existing power supply will be used.
6. The programmer and lower PCB are no longer required.
7. Open the case on the upgrade kit. Remove the two screws from the new PCB as shown in figure 1.
8. Remove the copper stand-offs from the old PCB and install on the new PCB as shown figure 2.



*Figure 1.*



*Figure 2.*

9. Install the power supply. Place the power supply over the four screw holes and secure the power supply to the case with the screws.
10. Connect the power supply cable to the new PCB as shown in figure 3.



*Figure 3.*



*Figure 4.*

11. Connect the cable to the power supply as shown in figure 4.
12. Place the upper PCB onto the copper stand-offs and secure the upper PCB with the screws as shown in figure 5.



*Figure 5.*

13. Replace the cover and install the ZIF Socket\*.
14. Please remove the serial number label (with the barcode) from the back of the existing unit. Place this serial number on the new unit.
15. Connect the Dataman-48UXP to your PC and then run a self-test.

**Interface:** USB or parallel port (DB-25) connector with EPP mode.

\* Optional, may simplify installation